

RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

METRIC/IMPERIAL/MIXED DISPLAY

The Trip computer readings can be changed between metric, imperial, and mixed units in the **Trip Computer** menu of the Message centre. See **40, INSTRUMENT PANEL MENU**.

Note: *Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of metric or imperial units.*

SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Message centre, as either a distance or time left until a service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.