


SURROUND CAMERA SYSTEM



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.

For information on the rear-view camera, see **105, REAR CAMERA**.

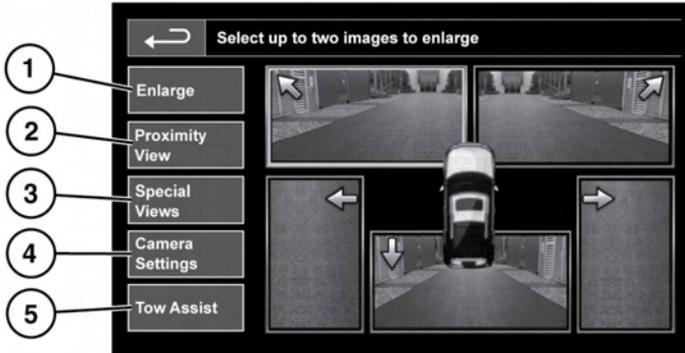

E158350

The camera home page is accessed by using the Touch screen **Home menu**. Select **Extra features**, then select **Cameras** and then select the camera icon.

- 1. Enlarge:** To enlarge a camera view, touch the image, then touch the **Enlarge** icon. Any 2 images can be selected and enlarged to view side-by-side on the screen. When viewing the 2 images, one of them can be selected to view as a full screen image. It can then be zoomed into and panned around using the magnifier and arrow icons.
- 2. Proximity View:** Touch to select a combination of 3 images from the front and passenger side cameras.
Automatic Proximity View (Japan only): When a forward or a reverse gear is selected, the forward or rear view will be displayed. Once the vehicle's speed exceeds 18 km/h (11 mph) or the return icon is pressed, the camera screen will disappear.

***Note:** Proximity view can be accessed at any time, by touching Proximity View on the Camera home page.*

- 3. Special Views:** Touch to display a selection of preset views. They are provided to assist with difficult manoeuvres and are:

 - **Kerb view:** Shows views from the 2 side cameras.
 - **Junction view:** Shows views from the 2 front cameras.
 - **Trailer view:** Shows the rear camera view.
- 4. Camera Settings:** Touch to access the camera options page. To deactivate the Semi-auto camera functionality, select **Off**. The Proximity view is now only accessible by manual activation using the **Proximity View** soft key.
- 5. Tow Assist:** Touch to display the trailer guidance setup screen.

Note: *The quality of the camera views may vary in different lighting conditions.*

Note: *To maintain optimum performance, the cameras should be kept free from ice, frost, and dirt. See **204, SENSORS AND CAMERAS***