


FRONT CLIMATE CONTROL

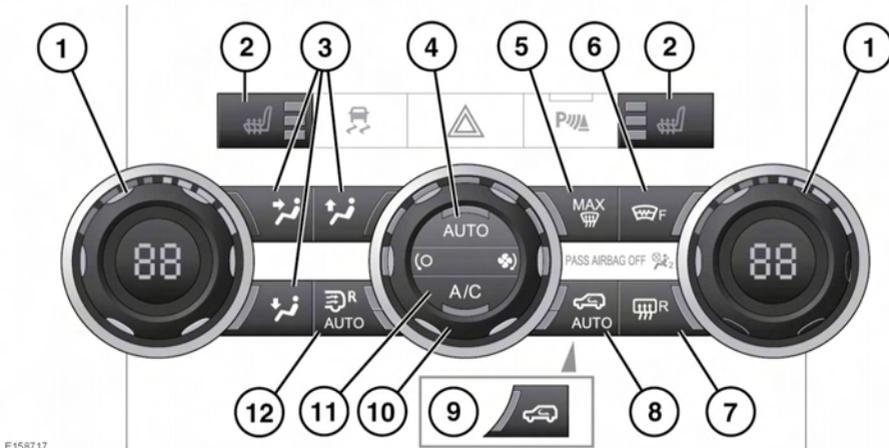

E158717

1. Temperature controls: Individual for driver/passenger settings.
2. Seat heaters:
 - Press once to turn on to high, twice to turn on to medium, three times to turn on to low and a fourth time to turn off.
3. Air distribution buttons:
 - Windscreen and side window vents.
 - Face-level vents.
 - Foot-level vents.

Note: More than one setting may be selected, at a time, to achieve the desired distribution.
4. AUTO mode: For fully automatic operation.
5. Maximum Defrost mode.
6. Heated front windscreen: Will deactivate after a predetermined length of time.

Note: Not operational on Brazilian specification vehicles.
7. Heated rear screen: Will deactivate after a predetermined length of time.

- !** Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.
8. Air quality sensor.
 9. Recirculation.
 10. Blower control:
 - Rotate to adjust the blower speed.
 - Rotate fully counter-clockwise to turn the Climate control system off.
 11. Air conditioning on/off: With the air conditioning off, the system operates in Economy mode, improving fuel economy.

Note: Using the system without air conditioning for long periods can cause the windows to mist.
 12. Rear environment:
 - Press once to control the rear heating and air conditioning using the front controls only. The **lower amber** lamp is illuminated.