


# Heating and ventilation

- Flashes **green** or **red** for 2 seconds when the **ON** or **OFF** buttons are pressed, to indicate that the signal was not received.
- Illuminates **orange** for 2 seconds before showing **green** or **red**, to indicate that the remote battery is low.
- Flashes **orange** for 5 seconds to indicate that the signal was not received and the remote battery should be replaced.

## ADDITIONAL REMOTES

Additional remote controls can be programmed to operate the heater. A maximum of 3 remotes can be programmed to each vehicle. Contact a Dealer/Authorised Repairer to purchase additional remotes and have them programmed to the vehicle.

## REPLACING THE REMOTE BATTERIES

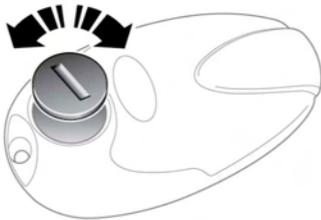

E147097

With the back of the remote control facing upwards, use a coin or a similar implement to rotate the battery cover. Lift the cover off, to reveal the battery compartment. Remove the old battery, and making sure that the correct polarity is maintained, insert a replacement 3.3-volt, CR1/3N battery. Replace the cover and rotate it to lock closed.