


## INTERIOR LIGHTS

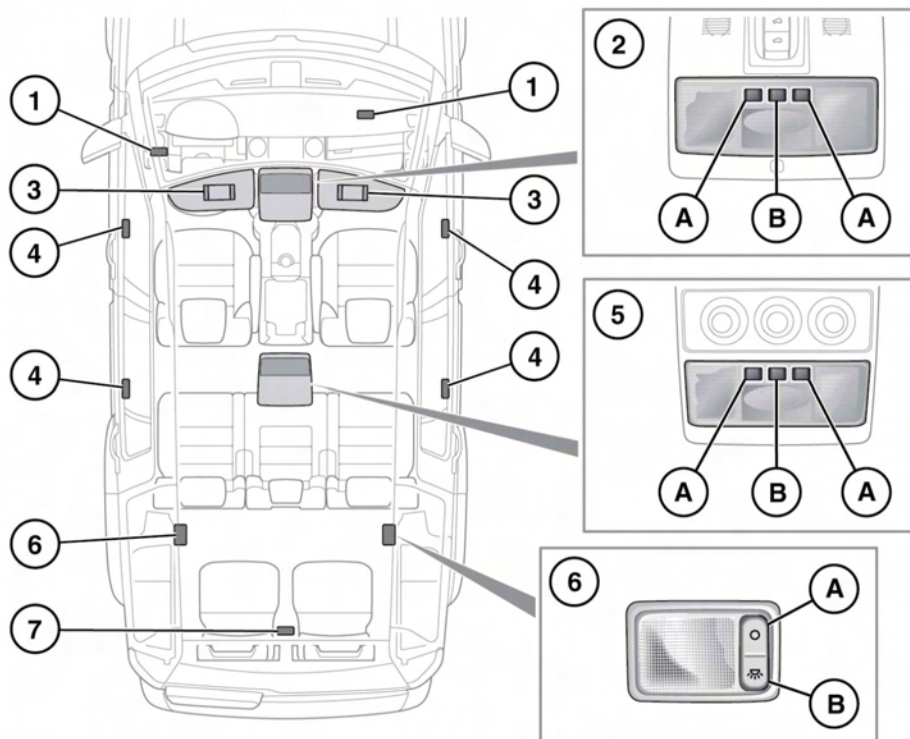

E155547

1. Footwell lamps: Automatically illuminate when the doors are opened.
2. Front interior lamp control:
  - A. Map lamp controls (on/off).
  - B. Main interior lamp control (on/off/Auto). To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode, the lamps will illuminate when a door is opened.
3. Sun visor lamps: Switch on or off, as required, using the switch.
4. Puddle lamps: Automatically illuminate when the doors are opened.
5. Rear interior lamp control:
  - A. Map lamp controls (on/off).
  - B. Main interior lamp control (on/off/Auto). To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode, the lamps will illuminate when a door is opened.
6. Third row seating courtesy lamps:
  - A. Press to turn off.
  - B. Press to turn on.
7. Loadspace interior lamp: Automatically illuminates when the tailgate is opened.