

# Garage door opener

## GARAGE DOOR TRANSCIVER

**⚠ Do not use the transceiver with any garage door opener that lacks the safety stop and reverse feature, as required by safety standards.**

**⚠ When programming the transceiver to a garage door opener or entry gate, make sure the area is clear. This will prevent potential harm or damage, as the gate or garage door will activate during the program.**

**⚠** This device may suffer from interference if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter, as well as the in-car transceiver.

The door transceiver is located in the rear-view mirror. It can be programmed to transmit the Radio Frequencies (RFs) of up to three different transmitters, which can be used to operate garage doors, entry gates, home lighting, security systems, or other Radio Frequency (RF) operated devices.

Although this section mainly describes the procedures for a garage door opener, it equally applies to the previously mentioned applications.

In some countries, this feature is also known as the HomeLink™ Universal Transceiver.


For further information, see **62, INFORMATION AND ASSISTANCE**.

## BEFORE PROGRAMMING

**⚠** When programming a device that may require you to press and re-press the hand-held transmitter (cycle), unplug the device during the cycling process to prevent possible motor failure.

For the best results, fit a new battery to the hand-held transmitter of the garage door opener (or other device) before programming. If your garage door opener receiver (located in the garage) is equipped with an antenna, make sure that the antenna is hanging straight down.

## PROGRAMMING

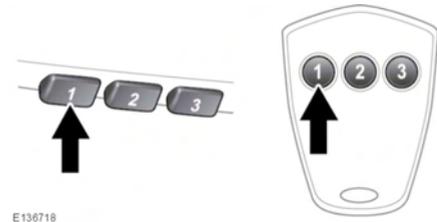

### With the engine switched off:

1. Make sure that the ignition system is on.
2. Hold the end of the original garage door opener hand-held transmitter 50 to 150 mm (2 to 6 inches) away from the transceiver in the rear-view mirror; keeping the indicator lamp in view.
3. Using both hands, simultaneously press and hold both the chosen transceiver button on the rear-view mirror, as shown above, and the hand-held transmitter button. Keep both buttons pressed. The indicator lamp will flash slowly at first and then change to a fast flash. When the indicator lamp flashes rapidly, release both buttons. The rapid flashing lamp indicates successful programming.
4. If, after 60 seconds, the indicator lamp does not flash rapidly, release both the transceiver and the hand-held transmitter buttons and repeat the procedure starting with Step 2. Position the hand-held transmitter at a different angle and/or distance.