


TOUCH SCREEN HOME MENU

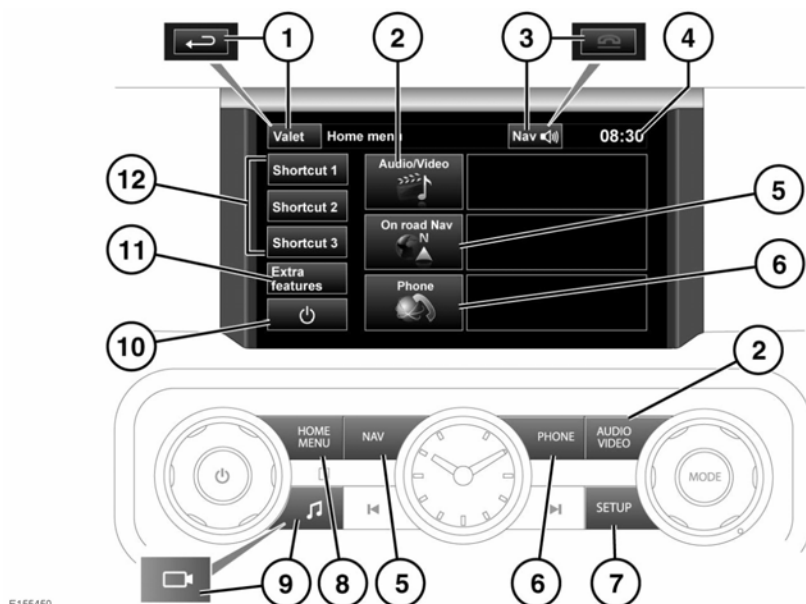

E155450

- ⚠ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.
 - ⚠ Avoid spilling or splashing liquids onto the Touch screen.
1. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed.
 2. Touch or press to select the **Audio/Video** menu, see **134, AUDIO/VIDEO CONTROLS**.
 3. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
 4. Touch to adjust the time/date.
 5. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
 6. Touch or press to select the **Phone** menu.
 7. Touch to select the Touch screen **Setup** menu.
 8. Press to select the **Home** menu.
 9. Press to display the audio settings. When proximity cameras are fitted, this icon is changed and the button will turn the cameras on/off.
 10. Press to turn the screen on/off.
 11. Press to select the **Extra features** menu.
 12. To change the shortcuts, see **66, TOUCH SCREEN SETUP**.