

## DRIVER EXIT

To prevent the vehicle from being inadvertently left in a driveable condition, the vehicle will detect when a driver is not present, and automatically turn off the ignition.

If Drive (**D**) or Sport (**S**) is selected, the Driver exit feature will turn the vehicle's ignition off if the following conditions exist:

- The driver's seat belt is unbuckled.
- The brake pedal is released.

If Neutral (**N**) or Park (**P**) is selected, the Driver exit feature will turn the vehicle's ignition off if the driver's seat belt is unbuckled.

Once the vehicle's ignition has been turned off, the vehicle can be locked. For more information see **9, SINGLE LOCKING**.