


- to auto seek down the frequency to the next radio station.
- 5. Seek up:  
Short press:
  - To select the next radio preset.
  - To select the next track on the chosen audio source - CD, MP3 etc.
  - when the telephone is in use, press to scroll up lists of calls or phonebook entries.
  - To select the next TV channel on the channel list or the next DVD chapter.
 Long press:
  - To auto seek up the frequency to the next radio station.
- 6. CD/DVD loading slot.  
The player will accommodate 1 disc at a time, but up to 10 CDs can be uploaded into the CD store. Only Compact Disc Digital Audio (CDDA) discs can be uploaded into the CD store.  
Only discs with CDDA tracks and no other type, can be uploaded to the Stored CD store.  
Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.
- 7. CD/Digital Versatile Disc (DVD) eject button.
- 8. Rotate to scroll through audio sources.
- 9. **MODE**: Press repeatedly to scroll through all of the audio/video sources.
- 10. **AUDIO VIDEO**: Press for direct access to the **Audio/Video** menu.
- 11. Touch screen.
- 12. Press to increase the volume for any source.
- 13. Press to decrease the volume for any source.

## AUDIO SETTINGS

To view the Audio/Video menu, press the **Audio Video** button or the **Audio settings** soft key on the Touch screen.

To adjust the sound settings, touch the **Tone** soft key. Touch the **+** or **-** soft keys to adjust Bass, Treble or Subwoofer levels.

To adjust balance and fade settings, touch the **Balance/Fade** soft key.

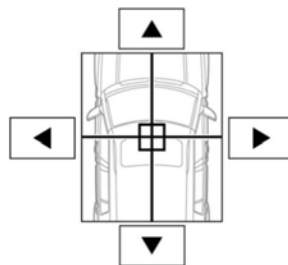

E 155569

Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield**, or select **Off** to switch the surround sound off.

**Note:** Surround sound options are not available for certain sources where the surround sound mode is set automatically.

## LOADING DISCS



Do not force the disc into the slot.



Do not use irregular shaped CDs or DVDs, and those with a scratch protection film or self-adhesive label attached.