

# Wheel changing

## WHEEL CHANGING SAFETY

Before raising the vehicle or changing a wheel, make sure that you read and comply with the following warnings:

-  Always find a safe place to stop, off the highway and away from traffic.
-  Make sure that the vehicle and jack are both on firm, level ground.
-  Apply the Electric Parking Brake (EPB) and engage Park (P).
-  Make sure the Air suspension is set to off-road height. **THE JACK WILL NOT BE ABLE TO BE LOCATED TO THE JACKING POINT WITHOUT DOING THIS.**
-  Switch on the hazard warning lamps.
-  Make sure that the front wheels are in the straight ahead position, and engage the steering lock.
-  Disconnect any trailer/caravan from the vehicle.
-  Make sure that all passengers, and animals, are out of the vehicle and in a safe place away from the highway.
-  Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.
-  Remove the spare wheel prior to jacking the vehicle, to avoid destabilising the vehicle, when raised.
-  Never place anything between the jack and the ground, or the jack and the vehicle.
-  **WARNING - THAT NO PERSON SHOULD PLACE ANY PORTION OF THEIR BODY UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.**




Take care when loosening the wheel nuts. The wheel brace may slip off if not properly attached, and the wheel nuts may give way suddenly. Either unexpected movement, may cause an injury.



Take care when lifting the spare wheel, and removing the punctured wheel. The wheels are heavy and can cause injuries if not handled correctly.

## TOOL KIT

*Note:* Tool types and positions may vary from the illustrations.

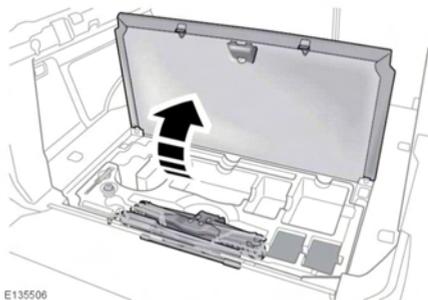

**5 seat vehicles:** The tool kit is located under a panel set in the loadspace floor.

