


## REAR LAMP REMOVAL

To change any of the rear bulbs, it is necessary to completely remove the lamp unit from the vehicle.

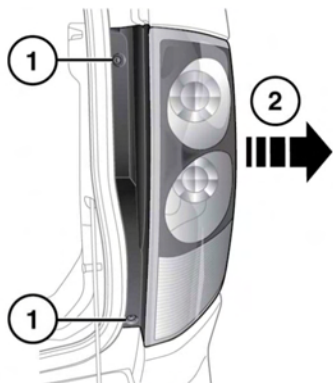


E134870

1. With the taildoor open, remove the two screws from the inner edge of the unit.
2. Pull the unit carefully away from the vehicle.
3. Disconnect the electrical connector and remove the unit from the vehicle. Place face down on a flat surface covered in soft material, to prevent damage.
4. Refitting the lamp unit is the reverse of removal.

## REAR LAMP BULB REPLACEMENT

**Note:** The direction indicator lamp, stop lamp, and tail lamp are LED units, and cannot be serviced.

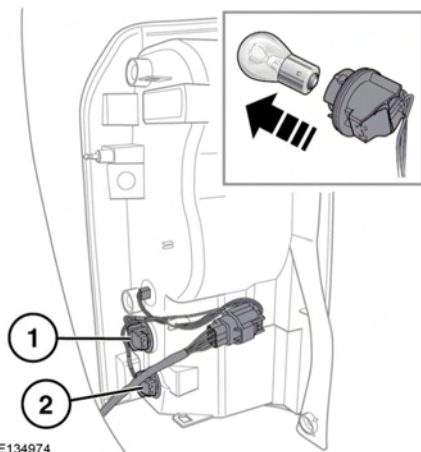

E134974

1. Reversing lamp.
2. Rear fog lamp.

Twist the relevant bulb unit and pull to access the bulb. Push, twist, and pull to remove the bulb.