

Note: If the system does not detect an object that is likely to come into contact with the vehicle, it will not display any tracking information in the Touch screen.

When in Reverse (**R**), both the front and rear sensors are active; when in Drive (**D**), only the front sensors are active.

When objects are detected, the Parking aid system emits a warning tone which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the obstacle is within 300 mm (12 inches).

The Parking aid system operates up to a speed of 16 km/h (10 mph).

Note: The sensors should be kept clean to maintain accuracy and performance. See **204, SENSORS AND CAMERAS**.


PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, the switch indicator will flash. Also a graphic and the message **Parking Aid is not available**. Please consult your dealer will be displayed on the Touch screen. Contact a Dealer/Authorised Repairer as soon as possible.

REAR CAMERA

 **Always turn and look before reversing. It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.**

 Some overhanging objects or barriers which could cause damage to the vehicle, may not be detected by the camera.

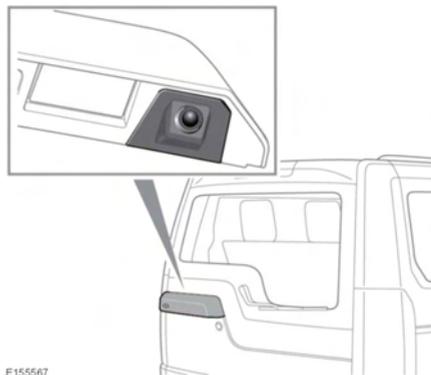

E155567

When Reverse (**R**) is selected, the screen automatically displays a wide-angle, colour image from the rear of your vehicle.

The Rear camera system provides a rear-view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

Note: The rear-view images and menu options are dependent upon the specification of the Rear camera fitted to the vehicle.


Note: A camera icon will be displayed on the user options screen, when selected from **Extra features**. Touch the camera icon, to return to the Rear camera screen.

Note: The Rear camera display has priority over the Parking aids display. To cancel the camera display at any time, push the **Home menu** button or touch the back soft key.

Rear camera display on the Touch screen will discontinue when either of the following apply:

- A forward gear is selected for longer than 5 seconds.
- A forward gear is selected and/or the vehicle's speed is greater than 18 km/h (11 mph).

Parking aids

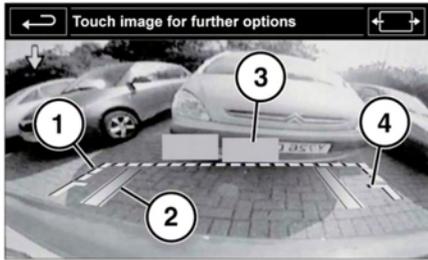


E161393

1. Dotted guidance line: The safe working width of the vehicle (including the exterior mirrors).
2. Solid guidance line: The projected path based on the current steering wheel position.
3. Park Distance Control (PDC) graphics: A coloured area appears, to indicate which rear sensor(s) has been activated.
4. Tailgate access guidance line: Do not reverse beyond this point, if tailgate access is required.

For vehicles fitted with a Rear camera only:

To adjust the camera settings while in Reverse (R), touch anywhere on the Touch screen to display the settings.

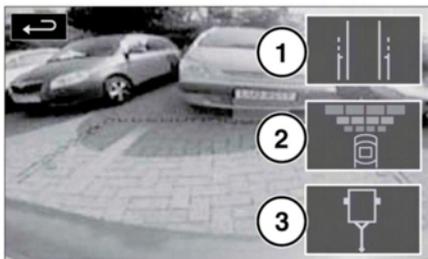


E161395

1. Touch to enable/disable the Park assist guidance lines.

2. Touch to enable/disable the Park Distance Control (PDC) graphics.
3. Touch to enable/disable the Hitch guidance line. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **80, HITCH GUIDANCE**.

For vehicles fitted with a Surround camera system:

To adjust the camera settings while in Reverse (R), touch anywhere on the Touch screen to display the settings, or select **Extra features** from the Home menu, touch **Cameras** and select **Settings**.

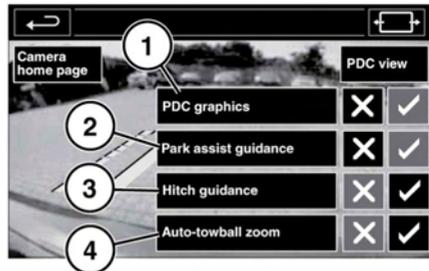

E161394

1. Touch to enable/disable the Park Distance Control (PDC) graphics.
2. Touch to enable/disable the **Park assist guidance** lines.
3. Touch to enable/disable the **Hitch guidance** line. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **80, HITCH GUIDANCE**.
4. Touch to enable/disable the **Auto-towball zoom**. As the vehicle closes to within 600 mm (24 ins) of a towing hitch, an automated zoom is operated.