

The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

Note: *If the connection is not detected, setup can be manually prompted by touching the Tow Assist soft key on the **Camera** menu.*

On first use, the setup screens take the user through a series of configuration options for the connected trailer. Information such as trailer hitch length, number of axles and camera preference is required to finalise setup. Once completed, the details are stored for future use.

When a new or existing trailer configuration is selected, Tow assist automatically displays on the Touch screen when reverse gear is selected. Coloured lines are displayed to indicate the predicted path of both trailer and vehicle.

TOW BALL/DRAWBAR STOWAGE



The tow ball/drawbar receiver is heavy, care must be taken when handling it. When the ball locks into position, the locking lever can snap back under spring pressure, take care not to catch your fingers.

5 seat vehicles: The tow ball/drawbar receiver is stowed under the loadspace floor.

7 seat vehicles: The tow ball/drawbar receiver is stowed behind an access cover on the left side of the loadspace.