

## REMOVING THE DETACHABLE TOW BALL

Removal of the tow ball is the reverse of fitting.

**Note:** *The key cannot be removed when the tow ball has been detached.*