

Warning lamps

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See **119, HDC CONTROLS**.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

LOW RANGE (GREEN)



Illuminates when Low range has been selected.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.

FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

TRAILER DIRECTION INDICATORS (GREEN)



Illuminates, as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.