

# Warning lamps

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt is buckled.

## ENGINE/TRANSMISSION (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on. If the lamp illuminates when the engine is running, there is an emissions-related fault with the engine or transmission. The vehicle can be driven, but may enter Limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

## BRAKE (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on. If the lamp illuminates after starting the engine or whilst driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

## DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on.

If the lamp flashes while driving, the DSC system is active.

A fault with the DSC system is indicated by the warning lamp illuminating and an associated warning message, or the warning lamp flashing continuously when DSC is not active. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

## AIRBAG (AMBER)



Illuminates, as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.