

3. Right screen select.
4. Video source select.
5. Navigation summary.
6. Browse/TV channel list.
7. DVD menu.
8. Next track/file/channel/station.
9. Previous track/file/channel/station.
10. Play/Pause.
11. Repeat.
12. Information.
13. Subtitles on/off.
14. Press to select any available TV streams.
15. Cabin audio volume on/off.
16. Shuffle.
17. Cabin audio volume decrease/mute.
18. Cabin audio volume increase.
19. **Back**: Press to go back to the previous menu.
20. Radio band select.
21. Audio source select.
22. **OK**: Press to confirm selection.
23. Cursor control: Up\*.
24. Cursor control: Right\*.
25. Cursor control: Down\*.
26. Cursor control: Left\*.

\*These are multi-function keys depending on the source selected.

## USING RSE

To make sure the system responds to your selections, the upper end of the remote control should be pointed towards the appropriate rear screen.


To activate the system, press the Rear media on/off button on the remote control, followed by the appropriate screen selection button.

Next, select the desired audio or video function button. Subsequent selections on the remote control will operate the last selected user system.

To avoid accidental operation of the wrong user system, it is advisable to always select the required user system before making any other selection.

**Note:** To prevent accidental damage, always store the remote control in the stowage area provided, when not in use.

## REAR MEDIA HEADPHONES

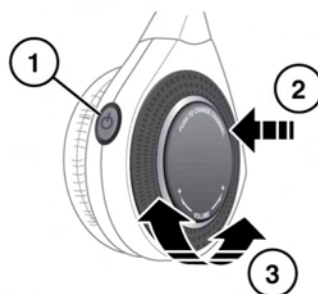

E150761

1. Press to turn on/off.
2. Press to change the audio channel.
3. Rotate to adjust the headphone volume.