

Standard audio system

Long press to enter radio manual seek mode or, to scan backwards through a CD track.

In radio manual seek mode, further short presses will change the frequency in single decrements.

- 12. MENU:** Press to select the Audio system menu, with the following options:
 - Audio settings.
 - Clock settings.
 - Language.
- 13. CD:** Press to select CD mode.
- 14. Tone:** Press to select the Tone menu.
- 15. TA:** Traffic information.
- 16.** Audio system information display.
- 17. MODE:** Press repeatedly to scroll through all audio modes.
- 18.** Steering wheel volume up.
- 19.** Steering wheel volume down.
- 20. Seek down:**

Short press to select the previous radio preset or the previous track on the chosen audio source.

Long press to scan backwards through a track.
- 21. Seek up:**

Short press to select the next radio preset or the next track on the chosen audio source.

Long press to scan forwards through a track.

ADAPTIVE VOLUME CONTROL (AVC)

The AVC feature adjusts the volume level, to compensate for the changes in road noise as the vehicle's speed increases or decreases.

Note: *The AVC setting represents the volume increase and not the volume level.*

If the AVC level is set to **zero**, there will be no volume increase. With a low level setting, the volume increase at speed will be minimal. If a high level setting is used, there will be a noticeable increase of volume at greater speed.

To set the AVC level:

- 1.** Press the **MENU** button, then using the menu navigation control (**10**), press up or down to select **AUDIO settings** to access the volume settings menu. Select **Adaptive Vol.**
- 2.** Use the left and right buttons on the menu navigation control (**10**) to adjust the AVC setting.
- 3.** Press **OK** to confirm the selection.

STONE ADJUSTMENT

Press the Tone button (**14**), to display the Tone menu. The settings for bass, treble, balance, and fade can be adjusted using the navigation buttons. Press **OK** to store the settings and return to the previous screen.

Note: *If no adjustment is made within 10 seconds, the display will revert to the previously displayed screen.*

AUTO STORING RADIO STATIONS

AutoStore can be used to store the stations with the strongest signals available, either from the AM or the FM waveband.

Using Autostore:

- 1.** Press **RADIO** button (**4**) to select the desired waveband.
- 2.** Find a station. If necessary, use the seek buttons (**9** and **11**).
- 3.** Press and hold the **RADIO** button until the display confirms that Autostore is in progress.