

# Standard audio system

Long press to enter radio manual seek mode or, to scan backwards through a CD track.

In radio manual seek mode, further short presses will change the frequency in single decrements.

**12. MENU:** Press to select the Audio system menu, with the following options:

- Audio settings.
- Clock settings.
- Language.

**13. CD:** Press to select CD mode.

**14. Tone:** Press to select the Tone menu.

**15. TA:** Traffic information.

**16.** Audio system information display.

**17. MODE:** Press repeatedly to scroll through all audio modes.

**18.** Steering wheel volume up.

**19.** Steering wheel volume down.

**20.** Seek down:

Short press to select the previous radio preset or the previous track on the chosen audio source.

Long press to scan backwards through a track.

**21.** Seek up:

Short press to select the next radio preset or the next track on the chosen audio source.

Long press to scan forwards through a track.

## ADAPTIVE VOLUME CONTROL (AVC)

The AVC feature adjusts the volume level, to compensate for the changes in road noise as the vehicle's speed increases or decreases.

**Note:** The AVC setting represents the volume increase and not the volume level.

If the AVC level is set to **zero**, there will be no volume increase. With a low level setting, the volume increase at speed will be minimal. If a high level setting is used, there will be a noticeable increase of volume at greater speed.

To set the AVC level:

1. Press the **MENU** button, then using the menu navigation control (**10**), press up or down to select **AUDIO settings** to access the volume settings menu. Select **Adaptive Vol.**
2. Use the left and right buttons on the menu navigation control (**10**) to adjust the AVC setting.
3. Press **OK** to confirm the selection.

## tone adjustment

Press the Tone button (**14**), to display the Tone menu. The settings for bass, treble, balance, and fade can be adjusted using the navigation buttons. Press **OK** to store the settings and return to the previous screen.

**Note:** If no adjustment is made within 10 seconds, the display will revert to the previously displayed screen.

## AUTO STORING RADIO STATIONS

AutoStore can be used to store the stations with the strongest signals available, either from the AM or the FM waveband.

Using Autostore:

1. Press **RADIO** button (**4**) to select the desired waveband.
2. Find a station. If necessary, use the seek buttons (**9** and **11**).
3. Press and hold the **RADIO** button until the display confirms that Autostore is in progress.