



6. **Lock:** Touch to lock or unlock the rear media remote.
7. **System:** Touch to turn the selected rear screen/s ON/OFF.
8. Forward/Skip for the selected screen.
9. Play/Pause for the selected screen.
10. Rewind/Skip for the selected screen.
11. **Source:** Touch to select the Rear media source screen.
12. Media source selection: Touch the required media button.

**Note:** For DAB Radio, select Radio.

13. **Source -:** Touch to select the required media and return to the **Rear media** control screen. If required, the selected source can then be controlled via the front screen.

**Note:** When the main Rear media control screen is displayed on the Touch screen, the Rear media remote control will be locked out.

## REAR MEDIA REMOTE CONTROL

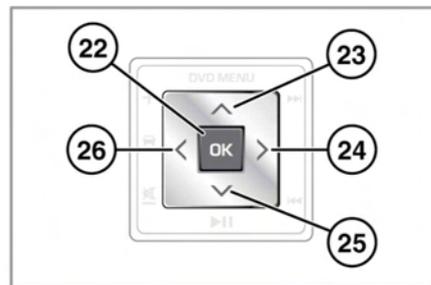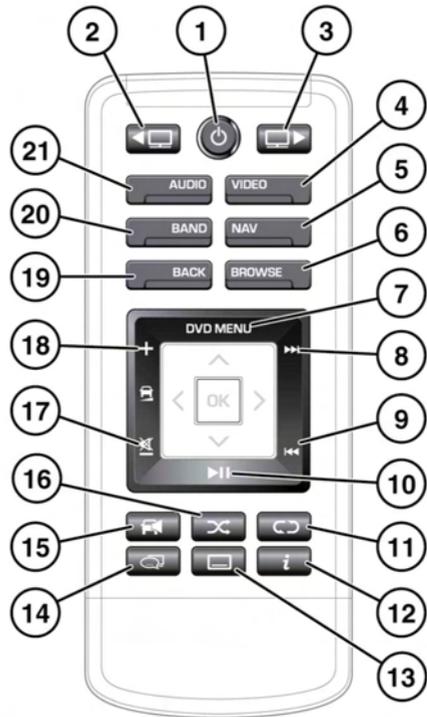

E151273

1. Press and release to turn off the screen. Press and hold to turn off the Rear media system.
2. Left screen select.