


## FOLDING THE SEATS (7 seat vehicle)

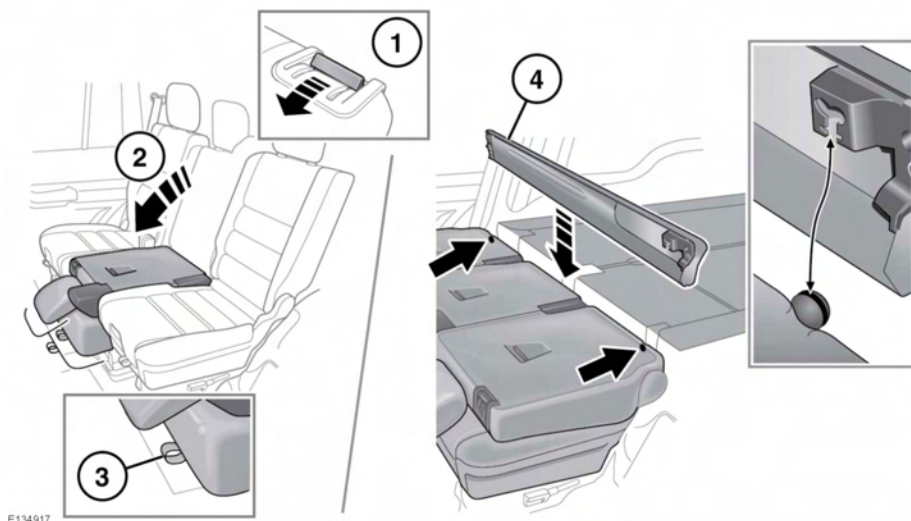

E134917

One of the seats may be folded to form a table for the other two seats, or all three seats may be folded forward to extend the loadspace. A seat may also be folded to gain access to the third row seats.

**Note:** The rear seats may not be folded if the front seats are in their furthest rearward position.

**Note:** The centre seatback must always be folded first.

1. Pull the seatback release lever forwards.
2. Fold the seatback forwards into the table fold position.
3. Pull the strap at the front of the seat, and press down to fold into the loadspace extension position.
4. The loadspace cover may be stowed, as shown, behind the folded seats.

## RAISING THE SEATS (7 seat vehicle)



The seat position should be checked and physically tested to make sure that the cushions and seatback are secure, before driving. If the seatbacks are not fully locked in place, red markers will be visible around the seatback release levers.



When raising the rear seats, make sure that the seat belts are correctly routed in to the seat belt guides and not trapped behind the seats.



Do not attempt to raise the seats when the loadspace cover is stowed behind them. Damage to the loadspace cover will result.

**Note:** The centre seatback should always be raised last.

1. Pull the strap (3) at the front of the cushion.