

E140084


## To set a timed climate program:

1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select the day for which you want to set a program, or select **All Week** to select the same start time for every day.
3. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off using the power soft key.
4. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
5. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer using the same process.

**Note:** The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu. See **40, INSTRUMENT PANEL MENU**.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant power soft key on the timer setup menu or the **Power** soft key on the **Timed Climate** information home menu.

## USING THE TIMED CLIMATE REMOTE

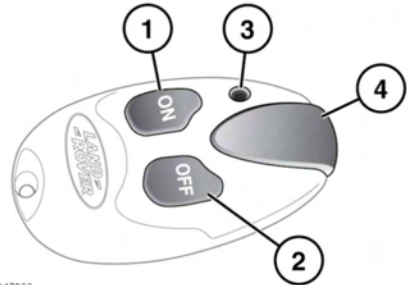

E147096

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

**Note:** Avoid touching the antenna when operating the **ON** or **OFF** button.

The remote control has an approximate range of 100 m. There is no need to point the antenna at the vehicle.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate to confirm that an automatic heating program has been initiated. The LED flashes once every 2 seconds to indicate that the heater is active.

The heating program will continue for 30 minutes, then it will switch off automatically to prevent the vehicle's battery from discharging. It also turns off automatically if the engine is started.

The LED indicator signals various states and conditions for the heater as follows:

- Illuminates **green** for 2 seconds when the **ON** button is pressed, to indicate that heater operation has been requested.
- Illuminates **red** for 2 seconds when the **OFF** button is pressed, to indicate that the heater has stopped.