


LABEL LOCATIONS



Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the vehicle's ignition is switched on.

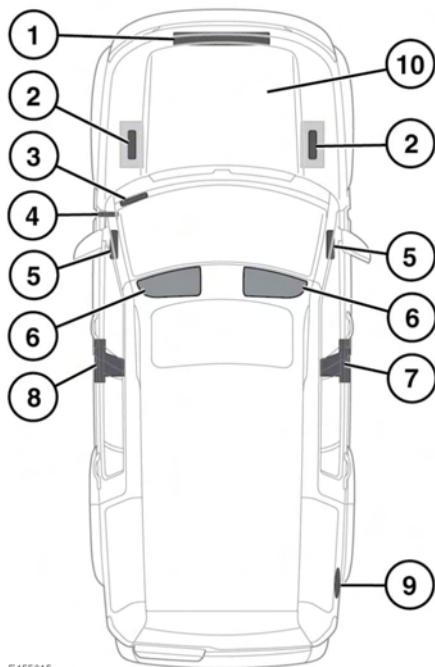

E155615

1. Bonnet locking platform - Air conditioning label, VIN label.
2. Top of the battery - Battery warning symbols.

3. Top left of fascia - Vehicle Identification Number (VIN) label.
4. Base of left side A pillar - VIN label.
Note: The VIN number is also etched onto the longitudinal member, rearwards of the right side front wheel.
5. End of fascia (passenger side) - Passenger airbag label.
6. Sun visor - Airbag label, vehicle handling label.
7. Base of right side B pillar - Tyre pressure label, airbag warning label.
8. Left side B pillar - Airbag warning label.
9. Inside fuel filler flap - Fuel label.
10. Diesel - Right side of engine block or camshaft cover - Engine number.
Petrol - Left side of engine block - Engine number.

It is important that you are familiar with these subjects to make sure that your vehicle and its features are used safely.

Note: If you need to communicate with a Dealer/Authorised Repairer, you may be asked to quote the VIN number.

VEHICLE BUILD DATE PLATE

This is the calendar month and year in which the body and power train assemblies were conjoined and the vehicle was driven from the production line.

The vehicle built date is shown on the tyre pressure label attached to the right side B pillar.