

**Lo to Hi change:**

- The **Lo** range lamps flash during the change.
- The **Lo** range indicator extinguishes when the change is complete.
- The message **HIGH RANGE SELECTED** is briefly displayed in the Message centre.

**RANGE CHANGING ON THE MOVE**

The recommended method of changing range is with the vehicle stationary. For experienced off-road drivers, a change from **Lo** to **Hi** while on the move can be accomplished, as detailed below.

**Note:** Changing from **Hi** to **Lo** can be performed only with the vehicle stationary.

**CHANGING FROM LOW TO HIGH RANGE**

With the vehicle travelling at no faster than 60 km/h (38 mph), select Neutral (**N**). Press the front of the transfer gear switch (**1**) to the **Hi** position and release it.

Indication of the range change status will be displayed in the Message centre.

Once complete, select Drive (**D**).