

## TELEPHONE SYSTEM ICONS



**Connect:** Use to send or accept a call and access the Last 10 calls list.



**Disconnect:** Use to end or reject a call.



**No phone connected.**



**Phone signal strength indicator.**



**Phone battery level indicator.**



**Bluetooth:** Indicates that a **Bluetooth®** wireless technology device is connected.



**Tick:** Indicates that a **Bluetooth®** wireless technology device is paired.



**Voicemail:** Press and hold to dial the stored voicemail number.




**Scroll bar up arrow:** Use to scroll up lists of detected phones, calls, or phonebook entries.



**Scroll bar down arrow:** Use to scroll down lists of detected phones, calls, or phonebook entries.

## STEERING WHEEL CONTROLS

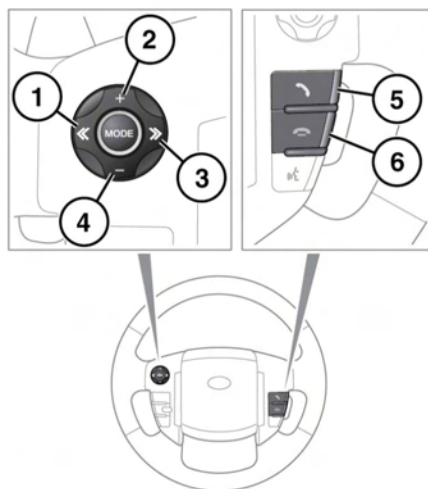

E135926

1. Press to scroll down through a displayed list.
2. Press to increase the volume when in a call.
3. Press to scroll up through a displayed list.
4. Press to decrease the volume when in a call.
5. Press to answer an incoming call. Press and release to access the Last 10 dialled list or to dial a number/contact. Press and hold to access the phonebook list view.
6. Press to end a call or to reject an incoming call.

**Note:** When scrolling through a phonebook or the Last 10 list, each contact is also displayed in the Message centre.

**Note:** In order to scroll through any Last 10 list, the 'phone' button (5) must first be pressed.

## CALL VOLUME

The phone call volume is operated by the Audio system's volume control.