

KEYLESS LOCKING



Never Double lock the vehicle with people, children, or pets inside. In the event of an emergency, they would be unable to escape, and the emergency services would be unable to release them quickly.



E134817

The vehicle will not lock automatically.

- To Single lock the vehicle, press the Keyless locking button (arrowed) on the door handle once. The hazard warning lamps will flash once to confirm. In some markets, an audible warning will sound.
- To Double lock the vehicle, press the Keyless locking button (arrowed) twice within 3 seconds. The hazard warning lamps will flash twice to confirm (with a long second flash). In some markets, a double audible warning will sound.

Note: Keyless locking will only activate if the Smart key is detected outside of the vehicle. If no Smart key is present when the button is pressed, two warning tones will sound.

To initiate Global window closing, press and hold the Keyless locking button for 3 seconds. This will also lock the vehicle and activate the alarm.

Note: The windows will close only while the button is pressed. To fully secure the vehicle, continue to press the button until all of the windows are fully closed.

DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered, it can be deactivated by pressing the Smart key unlock button, or by positioning the Smart key underneath the steering column, see **90, IF THE ENGINE FAILS TO START**.