

- exterior.....204
- interior.....205
- leather.....205
- park assist sensors.....204
- parking aids sensors.....204
- seat belts.....206
- sensors and cameras.....204
- under body.....204
- washer jets.....206
- Climate control
 - automatic recirculation.....69
 - auto setting.....69
 - driver controls.....
 - front.....68
 - fuel burning heater.....70
 - rear.....70
 - remote control batteries.....72
 - timed climate.....70
 - timed climate remote controls.....72
 - using the remote control.....71
- Clock.....39
- Clock settings
 - standard audio.....133
- Closing the bonnet.....194
- Closing vehicle sensing.....58
- Cold weather driving
 - diesel particulate filter (DPF).....193
- Compact disc.....135
- Condensation (headlamps).....49
- Conformity declarations.....183, 264
- Connecting jump leads.....214
- Controls
 - driving position.....
 - overview.....
 - standard audio system.....123
- Coolant
 - checking the level.....209
 - specification.....209
 - top up.....209
- Courtesy delay.....48
- Covers
 - refitting.....194
 - removal.....194
- Critical warning messages.....43
- Cruise control.....111
 - ACC driving hints.....114
 - ACC follow mode.....112
 - ACC gap change.....113
 - ACC radar detection beam issues.....114
 - ACC set speed and follow mode
 - override.....113
 - adaptive cruise control.....112
 - adaptive cruise control malfunction.....115
 - follow mode.....112
 - forward alert in ACC.....115
 - resume ACC follow mode.....114
 - resume ACC set speed.....114
 - using ACC.....112
 - warning lamp.....46
- D**
- DAB radio
 - displayed messages.....128–129
 - ensembles.....127, 144
 - ensemble seek.....127
 - manual tuning.....128
 - settings.....143
 - standard audio.....127
 - standard radio presets.....127
- DAB radio controls.....142
- DAB service list.....128
- Data recording.....250
- Daytime running lamps.....47
- Dealer locations.....176
- Declarations of conformity.....264
 - navigation system.....183
- Deselecting valet mode.....67
- Destination entry.....172
 - postcode.....175
 - search area.....172
- Detachable drawbar.....84
 - removing.....84
- Detachable tow ball.....82
 - removing.....83
- Detection beam issues.....114
- Diesel
 - filler flap.....187
 - fuel.....185

- glow plugs
 - warning lamp.....44
- misfuel device.....187
- specification.....184
- sulphur content.....185
- water in fuel.....187
- Diesel particulate filter (DPF).....192
 - cold weather driving.....193
 - driving short distances.....193
 - sulphur content.....185
- Dimensions.....256
- Direction indicators.....47
 - warning lamp.....45
- Disability modifications
 - airbags.....37
- Disabling the passenger air bag.....37
- Door mirrors.....54
 - blind spot monitor
 - closing vehicle sensing.....58
 - sensors.....59
- Door transceiver
 - assistance.....62
 - erase all programming.....61
 - garage door opener.....60
 - programming.....60
 - programming a single button.....61
 - programming the garage door opener.....60
 - rolling code device programming.....61
- Double locking.....9
 - full alarm.....9
- Drawbar
 - detachable.....84
- Drawbar stowage.....81
- Drive away locking.....7
- Driver controls.....
- Driver exit
 - deactivating intelligent stop/start.....93
- Driving
 - ACC automatic switch-off.....113
 - ACC driving hints.....114
 - ACC follow mode.....112
 - ACC forward alert.....115
 - ACC gap change.....113
 - ACC malfunction.....115
 - ACC radar detection beam issues.....114
 - ACC set speed and follow mode
 - override.....113
 - activating intelligent stop/start.....92
 - adaptive cruise control.....112
 - after a collision.....250
 - arduous conditions.....192
 - before starting.....250
 - blind spot monitor
 - closing vehicle sensing.....58
 - blind spot monitor messages.....59
 - brake control with ABS.....102
 - brakes important information.....102
 - daily checks.....192
 - deactivating intelligent stop/start.....92
 - driver controls.....
 - DSC active warning lamp.....44
 - electronic brake force distribution.....102
 - emergency brake assist.....102
 - forward alert.....115
 - forward alert warning lamp.....46
 - low oil pressure.....43
 - rain sensor.....53
 - resume ACC follow mode.....114
 - resume ACC set speed.....114
 - running-in.....191
 - sitting correctly.....14
 - steep slope control with ABS.....102
 - using ACC.....112
 - using cruise control.....111
 - weekly checks.....192
- Driving abroad
 - beam pattern.....49
 - headlamps.....49
- Driving position memory.....14
- Driving short distances
 - diesel particulate filter (DPF).....193
- Dynamic stability control (DSC).....98
 - DSC active warning lamp.....44
 - DSC off warning lamp.....44
 - switching off.....98
 - switching on.....98