

- exterior.....204
- interior.....205
- leather.....205
- park assist sensors.....204
- parking aids sensors.....204
- seat belts.....206
- sensors and cameras.....204
- under body.....204
- washer jets.....206
- Climate control
 - automatic recirculation.....69
 - auto setting.....69
 - driver controls.....
 - front.....68
 - fuel burning heater.....70
 - rear.....70
 - remote control batteries.....72
 - timed climate.....70
 - timed climate remote controls.....72
 - using the remote control.....71
- Clock.....39
- Clock settings
 - standard audio.....133
- Closing the bonnet.....194
- Closing vehicle sensing.....58
- Cold weather driving
 - diesel particulate filter (DPF).....193
- Compact disc.....135
- Condensation (headlamps).....49
- Conformity declarations.....183, 264
- Connecting jump leads.....214
- Controls
 - driving position.....
 - overview.....
 - standard audio system.....123
- Coolant
 - checking the level.....209
 - specification.....209
 - top up.....209
- Courtesy delay.....48
- Covers
 - refitting.....194
 - removal.....194
- Critical warning messages.....43
- Cruise control.....111
 - ACC driving hints.....114
 - ACC follow mode.....112
 - ACC gap change.....113
 - ACC radar detection beam issues.....114
 - ACC set speed and follow mode
 - override.....113
 - adaptive cruise control.....112
 - adaptive cruise control malfunction.....115
 - follow mode.....112
 - forward alert in ACC.....115
 - resume ACC follow mode.....114
 - resume ACC set speed.....114
 - using ACC.....112
 - warning lamp.....46
- D**
 - DAB radio
 - displayed messages.....128–129
 - ensembles.....127, 144
 - ensemble seek.....127
 - manual tuning.....128
 - settings.....143
 - standard audio.....127
 - standard radio presets.....127
 - DAB radio controls.....142
 - DAB service list.....128
 - Data recording.....250
 - Daytime running lamps.....47
 - Dealer locations.....176
 - Declarations of conformity.....264
 - navigation system.....183
 - Deselecting valet mode.....67
 - Destination entry.....172
 - postcode.....175
 - search area.....172
 - Detachable drawbar.....84
 - removing.....84
 - Detachable tow ball.....82
 - removing.....83
 - Detection beam issues.....114
 - Diesel
 - filler flap.....187
 - fuel.....185

glow plugs		
warning lamp.....	44	
misfuel device.....	187	
specification.....	184	
sulphur content.....	185	
water in fuel.....	187	
Diesel particulate filter (DPF).....	192	
cold weather driving.....	193	
driving short distances.....	193	
sulphur content.....	185	
Dimensions.....	256	
Direction indicators.....	47	
warning lamp.....	45	
Disability modifications		
airbags.....	37	
Disabling the passenger air bag.....	37	
Door mirrors.....	54	
blind spot monitor		
closing vehicle sensing.....	58	
sensors.....	59	
Door transceiver		
assistance.....	62	
erase all programming.....	61	
garage door opener.....	60	
programming.....	60	
programming a single button.....	61	
programming the garage door opener.....	60	
rolling code device programming.....	61	
Double locking.....	9	
full alarm.....	9	
Drawbar		
detachable.....	84	
Drawbar stowage.....	81	
Drive away locking.....	7	
Driver controls.....		
Driver exit		
deactivating intelligent stop/start.....	93	
Driving		
ACC automatic switch-off.....	113	
ACC driving hints.....	114	
ACC follow mode.....	112	
ACC forward alert.....	115	
ACC gap change.....	113	
ACC malfunction.....	115	
ACC radar detection beam issues.....	114	
ACC set speed and follow mode		
override.....	113	
activating intelligent stop/start.....	92	
adaptive cruise control.....	112	
after a collision.....	250	
arduous conditions.....	192	
before starting.....	250	
blind spot monitor		
closing vehicle sensing.....	58	
blind spot monitor messages.....	59	
brake control with ABS.....	102	
brakes important information.....	102	
daily checks.....	192	
deactivating intelligent stop/start.....	92	
driver controls.....		
DSC active warning lamp.....	44	
electronic brake force distribution.....	102	
emergency brake assist.....	102	
forward alert.....	115	
forward alert warning lamp.....	46	
low oil pressure.....	43	
rain sensor.....	53	
resume ACC follow mode.....	114	
resume ACC set speed.....	114	
running-in.....	191	
sitting correctly.....	14	
steep slope control with ABS.....	102	
using ACC.....	112	
using cruise control.....	111	
weekly checks.....	192	
Driving abroad		
beam pattern.....	49	
headlamps.....	49	
Driving position memory.....	14	
Driving short distances		
diesel particulate filter (DPF).....	193	
Dynamic stability control (DSC).....	98	
DSC active warning lamp.....	44	
DSC off warning lamp.....	44	
switching off.....	98	
switching on.....	98	