


USING THE PARKING AID

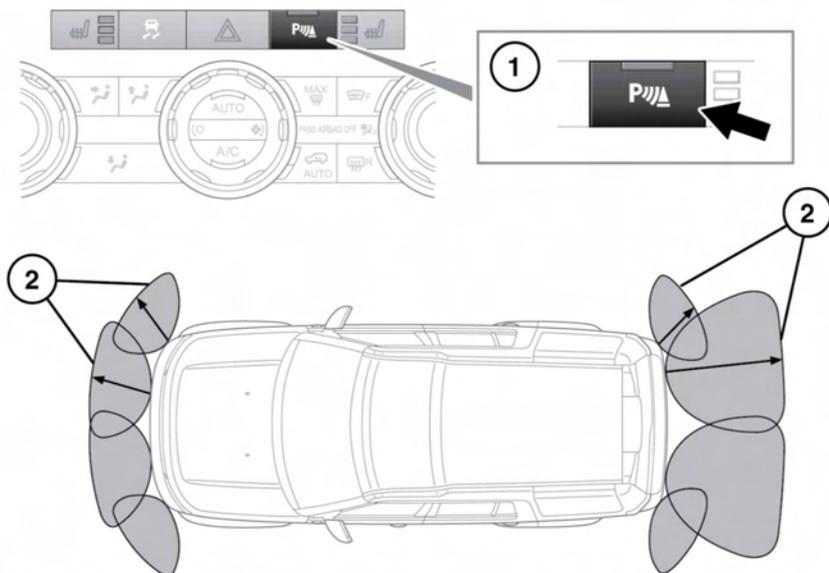

E155566

1. Parking aid switch.
2. Parking aid sensor detection zones.

⚠ **Parking aids may not detect moving objects, such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.**

ⓘ Parking aid sensors may not detect some obstructions, for example, narrow posts or small objects close to the ground.

ⓘ If accessories, e.g., tow bar, are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

Note: *If a trailer is connected to a Land Rover approved trailer socket, the rear sensors will be disabled.*

The Parking aid system is automatically activated when Reverse (R) gear is selected. The Parking aid switch indicator will illuminate to inform the driver that the system is active. To switch the Parking aid system off, press the switch.

The Parking aid system will remain off until Reverse (R) gear is selected, or the system is manually switched back on again.

The Parking aid system assists the driver while manoeuvring the vehicle in confined spaces. When active, object tracking along the front or rear of the vehicle will be displayed on the Touch screen.