

- The engine is running.
- The gear selector is out of Park (P).
- The Electric Parking Brake (EPB) is not applied (is released) - market dependent.



Unless required or prohibited by law, Daytime running lamps can be disabled or enabled by your Dealer/Authorised Repairer.


HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

HEADLAMP LEVELLING

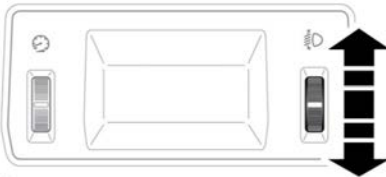

E 147273

Use the headlamp levelling control to account for vehicle loading changes.

Vehicle load	Switch position
Driver only	0
Driver and front seat passenger	0
Driver and passengers in all seats	Rotate down 1 position from 0
Maximum gross vehicle weight	Rotate down 2 positions from 0
Maximum rear axle load	Rotate down 3 positions from 0