

- The engine is running.
- The gear selector is out of Park (**P**).
- The Electric Parking Brake (EPB) is not applied (is released) - market dependent.



Unless required or prohibited by law, Daytime running lamps can be disabled or enabled by your Dealer/Authorised Repairer.


HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

HEADLAMP LEVELLING

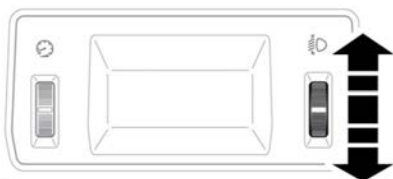

E147273

Use the headlamp levelling control to account for vehicle loading changes.

Vehicle load	Switch position
Driver only	0
Driver and front seat passenger	0
Driver and passengers in all seats	Rotate down 1 position from 0
Maximum gross vehicle weight	Rotate down 2 positions from 0
Maximum rear axle load	Rotate down 3 positions from 0