

- Interior lamps.....40
    - bulb changing.....147
    - bulb specification.....203
    - types.....40
  - Interior locking.....9
  - ISOFIX anchor points.....22
  - ISOFIX installation.....23
- J**
- Jump starting
    - connecting a starting aid.....166
    - connecting jump leads.....165
- L**
- Label locations.....197
  - Lamps.....38
    - bulb changing.....147
    - bulb replacement.....149
    - bulb specification.....203
    - condensation.....39
    - test.....34
    - TPMS warning lamp.....36
    - warning lamps.....34
    - xenon headlamps.....148
  - Leather cleaning.....157
  - Licence plate bulb.....153
  - Licensing
    - audio/video.....84, 86
  - Lighting
    - interior lamps locations.....40
  - Load securing.....60
  - Loadspace cover.....60
  - Loadspace floor
    - reversible cover.....61
  - Locking
    - door locks and release levers.....9
    - double locking.....8
    - drive away.....6
    - global closing.....8
    - mislock.....9
    - single.....8
  - Locking wheel nuts.....192
  - Low oil pressure warning lamp.....34
  - Lubricants specifications.....199
  - Luggage compartment
    - anchor points.....60
    - loadspace cover.....60–61
    - loadspace floor.....61
- M**
- Maintenance
    - after off-road driving.....156
    - arduous driving conditions.....142
    - brake fluid level.....161
    - bulb changing.....147–148
    - bulb specification.....203
    - capacities.....200
    - changing a fuse.....170
    - checking tyre pressure after a repair.....188
    - cleaning
      - exterior.....156
      - interior.....157
      - leather.....157
      - seat belts.....157
      - sensors and cameras.....156
      - under body.....156
    - closing the bonnet.....145
    - daily checks.....142
    - diesel particulate filter (DPF).....143
    - engine compartment.....146
    - engine compartment fuse box.....171
    - engine coolant level.....160
    - engine oil level.....159
    - fuel system.....144
    - fuse box (passenger compartment).....173
    - jump starting.....166
    - label locations.....197
    - lubricants and fluid specifications.....199
    - luggage compartment fuse box.....177
    - number plate bulb.....153
    - oil top up.....159
    - power steering fluid level.....162
    - smart key battery.....7
    - tyre repair kit.....186
    - tyre repair procedure.....187
    - using a starting aid.....166
    - washer fluid level.....163