

Starting the engine

SWITCHING ON THE IGNITION



E145741

To switch on the ignition without starting the engine:

1. Make sure a valid Smart key is inside the vehicle.
2. Press the **START/STOP** button until the warning lamps illuminate.
3. Press the **START/STOP** button again to switch off.



Applying the brake/clutch pedal when pressing the **START/STOP** button will start the engine for automatic/manual transmissions respectively.



ROLLING RE-START

A rolling re-start can be initiated by selecting Neutral (**N**) and pressing the engine **START/STOP** button.

KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade, or the Smart key is not detected by the vehicle, it will be necessary to use the Keyless start backup to disarm the alarm and start the engine.

The Keyless start backup can only be used when the message **Smart Key Not Found - Refer to Handbook** is displayed in the Message centre.

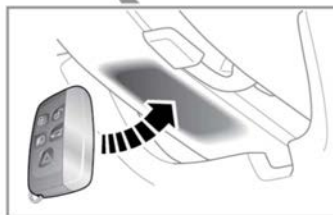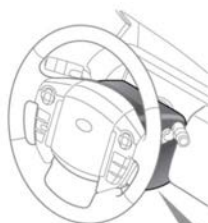

E145727

1. Position the Smart key against the underside of the steering column cover, with the buttons facing downwards.
2. Automatic transmission: Firmly press the brake pedal.
Manual transmission: Firmly press the clutch pedal.
3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released if it is safe to do so.

If the Smart key is not recognised, or the engine still fails to start, consult a Dealer/Authorised Repairer.