

DRIVER CONTROLS

1. Map reading lamp switch **40**.
2. Main interior lamp switch **40**.
3. Passenger airbag warning lamp **28**.
4. Sunroof switches **49**.
5. Lighting/direction indicator/Trip computer **38**.
6. Audio controls **82**.
7. Instrument panel, warning lamps, and Message centre **34**.
8. Message centre control. **31**.
9. Wiper/washer controls **41**.
10. Engine START/STOP **66**.
11. Audio system and controls **82**.
12. Touch screen. **51**.
13. CD eject. **82**.
14. Dynamic Stability Control (DSC) off **71**.
15. Hill Descent Control (HDC) **80**.
16. Central locking, lock.
17. Central locking, unlock.
18. Parking aid switch. **74**.
19. Intelligent stop/start. **68**.
20. Hazard warning lamps switch.
21. Climate control **54**.
22. Air Conditioning (A/C) on/off **54**.
23. Electric Parking Brake (EPB) **73**.
24. Terrain response **78**.
25. Gear selector **69**.
26. Climate control recirculation on/off switch **54**.
27. Heated steering wheel. **16**.
28. Telephone and voice recognition **104**.
29. Horn.
30. Steering column adjustment lever **16**.
31. Cruise control switches **77**.
32. Exterior mirror adjustment **44**.
33. Window switches **49**.
34. Rear window isolator **49**.
35. Interior illumination control.

