


AUTOMATIC CLIMATE CONTROL

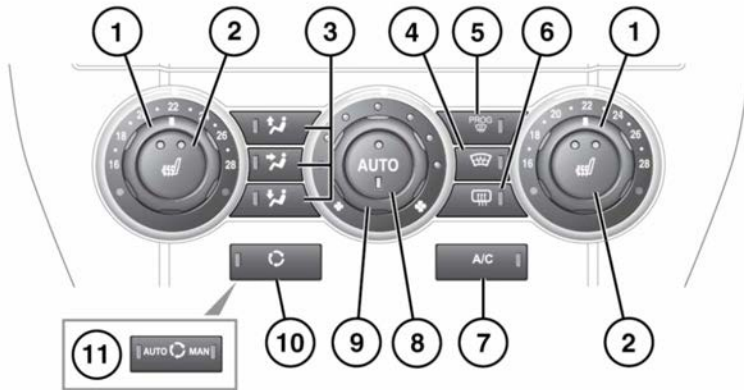

E145981

1. Left and right temperature controls: Rotate either control to adjust.
Note: *It is not possible to achieve a temperature differential of more than 4°C (7°F) between the left and right sides.*
2. Seat heaters: Press once to turn on high, twice to turn on low, and a third time to turn off.
3. Air distribution: Press the relevant button to set the air distribution to the required points. It is possible to select more than one option by pressing the required combination of buttons.
4. Heated windscreen: Press to switch on/off.
5. Maximum defrost programme: Press to switch on/off. The system will automatically adjust the blower output for maximum clearing. In addition, the front and rear screen heaters will be activated.
6. Heated rear screen: Press to switch on/off.
7. Air Conditioning: Press to switch on/off.
8. **AUTO** mode: Press to select fully automatic operation.
9. Blower speed: Rotate to adjust air flow speed through the vents. In manual mode, the current speed selection is indicated by an illuminated LED.
10. Recirculation:
 - Press briefly to turn on recirculation for 4 minutes, or to turn it off.
 - Press and hold to turn on recirculation, or until it is turned off.
11. Air quality sensor: press repeatedly to toggle between:
 - **AUTO** - The system automatically selects fresh air, or recirculation, depending on the levels of humidity and pollution present.
 - **MAN** - The system locks to recirculation.
 - Off - The system locks to fresh air intake.

Note: *The amber tell-tale lights in the switches will illuminate when the function is selected.*