

 The vehicle should only be towed for a maximum of 50 km (30 miles) at a maximum speed of 50 km/h (30 mph). Towing for a greater distance or at a higher speed, may result in serious damage to the transmission.

 Do not tow the vehicle if the gearbox cannot be set in Neutral (**N**).


The following procedure must be carried out carefully to prevent damage to the vehicle:

1. Secure the towing attachment from the recovery vehicle to the front towing point.
2. With the Electric Parking Brake (EPB) applied, switch on the ignition.
3. Apply the brake pedal and place the gear selector into Neutral (**N**).
4. Switch off the ignition.
5. The ignition may be switched on to allow operation of indicators, brake lamps, etc.
6. Release the EPB before towing the vehicle.

 Leaving the ignition switched on for extended periods will drain the vehicle's battery.

AFTER TOWING ON FOUR WHEELS

1. Apply the Electric Parking Brake (EPB).
2. Switch on the ignition and apply the brake pedal.
3. Place the gear selector in the Park (**P**) position.
4. Switch off the ignition.
5. Remove the towing attachment and refit the cover to the front towing point.

 **Use extreme caution when detaching towing equipment. Vehicle movement is possible, which can result in serious injury.**