


## MANUAL CLIMATE CONTROL

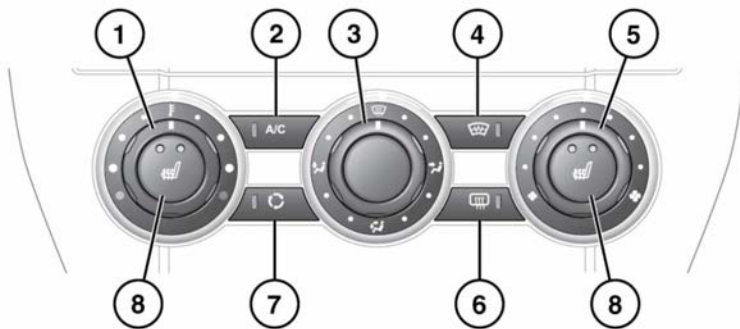

E145980

1. Temperature control, rotate to adjust.
2. Air Conditioning: Press to switch on/off.
3. Air distribution: Rotate to direct air flow.
4. Heated front screen: Press to switch on/off.
5. Blower speed: Rotate to adjust air flow speed through the vents. The current speed selection is indicated by an illuminated LED.
6. Heated rear screen: Press to switch on/off.
7. Recirculation:
  - Press briefly to turn on recirculation for 4 minutes, or to turn it off.
  - Press and hold to turn on recirculation, or until it is turned off.
8. Seat heaters: Press once to turn on high, twice to turn on low, and a third time to turn off.

**Note:** The amber tell-tale indicators in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.