


Steering wheel


ADJUSTING THE STEERING WHEEL

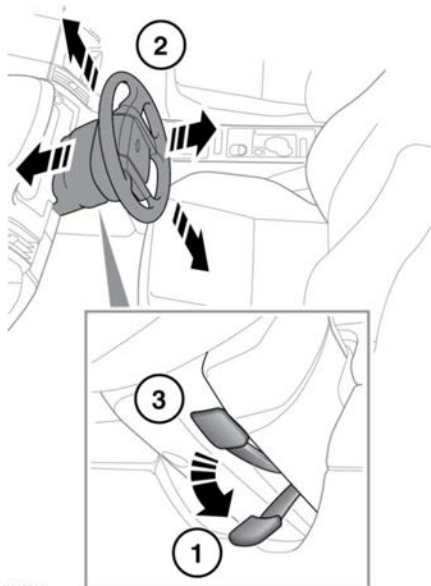

Never adjust the steering column while the vehicle is in motion.

1. Move the lever fully down to unlock the column.
2. Move the steering column up, down, in or out, to the desired position.
3. Move the lever fully up to re-lock the column.

HEATED STEERING WHEEL

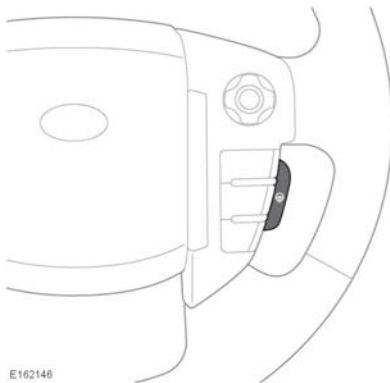

Press to switch on the steering wheel heating.
Press again to turn off.