


Steering wheel

ADJUSTING THE STEERING WHEEL

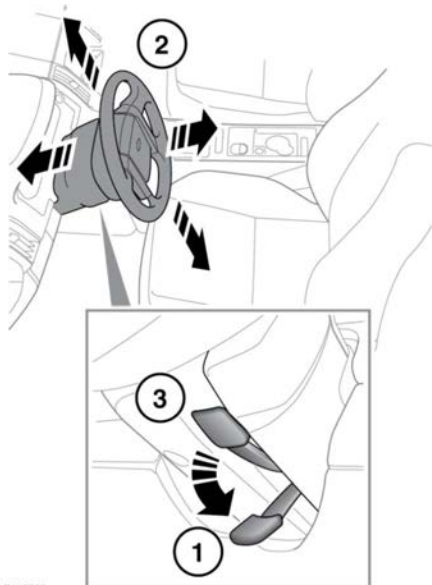


E145729

⚠ Never adjust the steering column while the vehicle is in motion.

1. Move the lever fully down to unlock the column.
2. Move the steering column up, down, in or out, to the desired position.
3. Move the lever fully up to re-lock the column.

HEATED STEERING WHEEL

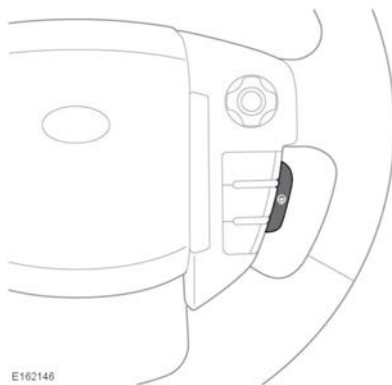

E162146

Press to switch on the steering wheel heating.
Press again to turn off.