


FUSE BOX LOCATIONS

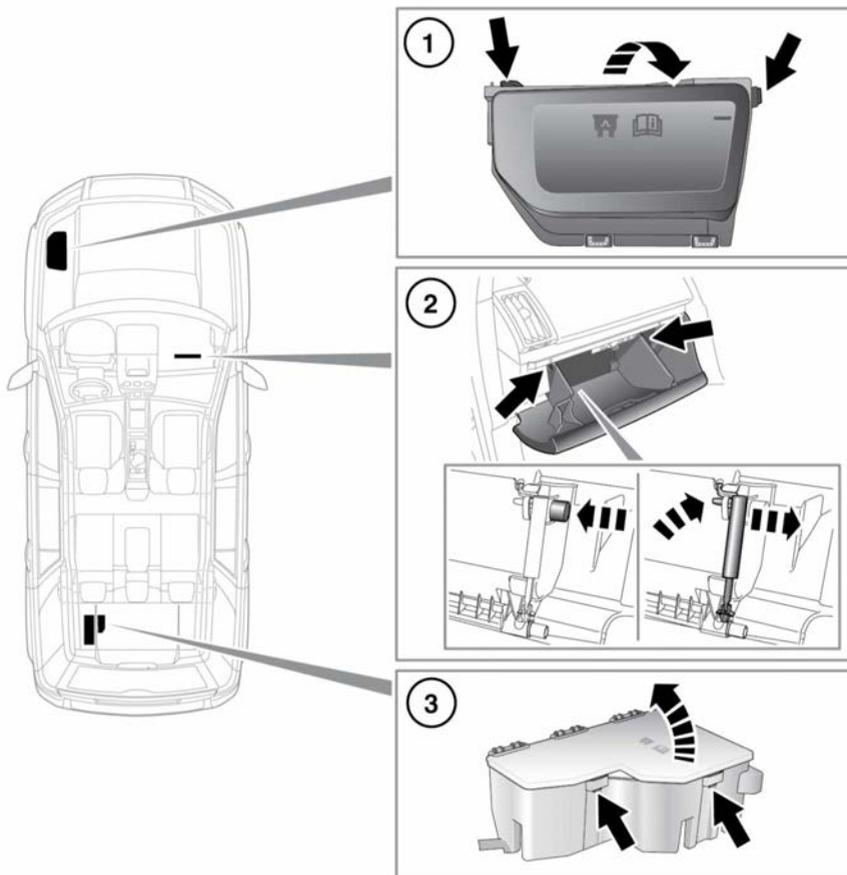

E154793

- ⚠ When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.
1. Engine compartment fuse box.
 - The fuse numbers and positions are shown on the inside of the fuse box cover.

2. Passenger compartment fuse box.
 - Open the glove box. See **58, STORAGE COMPARTMENTS**.
 - Lower the glove box by lightly pushing in at each support stay at the top of the left and right corners.