Interior lights

INTERIOR LIGHTS



E145581

- 1. Footwell lamps.
- 2. Glove box lamp.
- 3. Puddle lamps.
- 4. Sun visor lamps.
- 5. Map light controls (on/off).
- 6. Main interior lamp control (on/off/Auto). To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode, the lamps will illuminate when a door is opened.
- 7. Luggage compartment lamp.