


RADIO CONTROLS

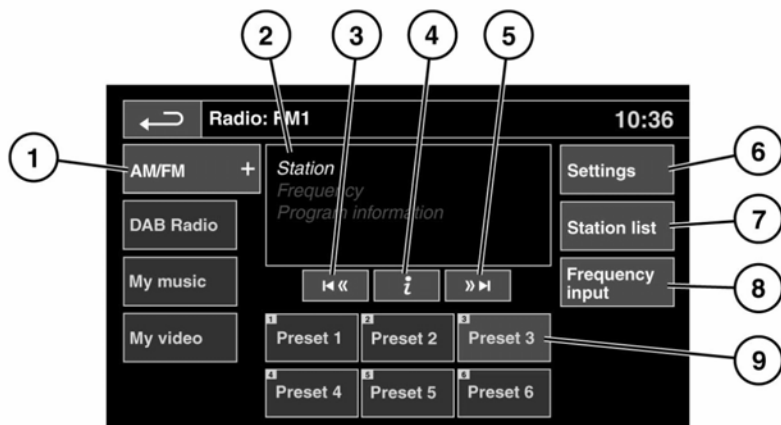

E154787



In the interest of safety, only operate or adjust the system when it is safe to do so.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- 1. AM/FM:** Waveband selection: Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.

The waveband selection box will close automatically after 5 seconds without use.

- 2.** Display showing information about the current station.

- 3.** Seek down:

- Short touch to auto seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

Note: When manual seek is selected, auto seek cannot be selected for approximately 10 seconds.

- 4.** Information: More information from the broadcasting station.

- 5.** Seek up:

- Short touch to auto seek up the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.

- 6. Settings:** Touch to view and activate/deactivate the following features: **RDS**, **Traffic**, **News**, **AF**, and **REG**. See **89**, **RADIO DATA SYSTEM (RDS)**.