


RADIO CONTROLS

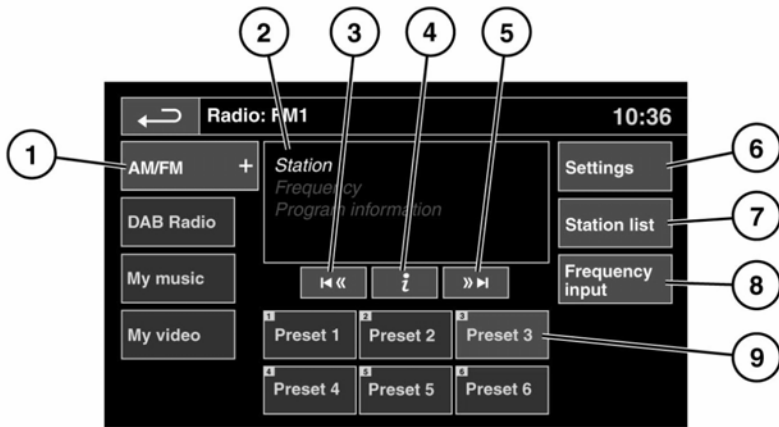

E154787

⚠ In the interest of safety, only operate or adjust the system when it is safe to do so.

⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. AM/FM: Waveband selection: Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close. The waveband selection box will close automatically after 5 seconds without use.

2. Display showing information about the current station.

3. Seek down:

- Short touch to auto seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

***Note:** When manual seek is selected, auto seek cannot be selected for approximately 10 seconds.*

4. Information: More information from the broadcasting station.

5. Seek up:

- Short touch to auto seek up the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.

6. Settings: Touch to view and activate/deactivate the following features: **RDS, Traffic, News, AF, and REG.** See **89, RADIO DATA SYSTEM (RDS).**