

- **Voice profile:** The Voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training programme first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.

- **Voice feedback:** Select **On/Off**.
- **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the Voice system training program, designed to enable the system to better recognise the vocal characteristics of a user. Select **User 1** or **User 2** and follow the on-screen and audible instructions. See **102, VOICE TRAINING**.

The training session can be cancelled, at any time, by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **101, USING VOICE CONTROL**.

## SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the loadspace. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

1. From the **Home** menu, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed, to indicate that a PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the Valet mode On screen is displayed.

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed, to indicate that a PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The Touch screen will be enabled.

**Note:** If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.

## EXTRA FEATURES

This menu allows selected extra features to be displayed for adjustment, switching on/off, or for information.

There are more extra features available than can be displayed at any one time; therefore, they are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.