SURROUND CAMERA SYSTEM



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when manoeuvring the vehicle.



The camera home page is accessed by using the Touch screen **Home menu**. Select **Extra features**, then select **Cameras** and then select the camera icon.

To adjust the camera settings, select **Settings**. See **105, REAR CAMERA**.

- Enlarge: To enlarge a camera view, touch the image, then touch the Enlarge icon. Any 2 images can be selected and enlarged to view side-by-side on the screen. When viewing the 2 images, one of them can be selected to view as a full screen image. It can then be zoomed into and panned around using the magnifier and arrow icons.
- Proximity View: Touch to select a combination of 3 images from the front and passenger side cameras.

Automatic Proximity View: When a forward or a reverse gear is selected, the forward or rear view will be displayed. Once the vehicle's speed exceeds 18 km/h (11 mph) or the return icon is pressed, the camera screen will disappear.

Note: Proximity view can be accessed at any time by touching Proximity View on the camera home page.

- **3. Special Views**: Touch to display a selection of preset views. They are provided to assist with difficult manoeuvres and are:
 - **Kerb view**: Shows views from the 2 side cameras.
 - Junction view: Shows views from the 2 front cameras.
- Tow Assist: Touch to display the trailer guidance set-up screen. See 86, TOW ASSIST.

Note: The quality of the camera views may vary in different lighting conditions.

Cameras

Note: To maintain optimum performance, the cameras should be kept free from ice, frost and dirt. See **217, SENSORS AND CAMERAS**.