

# Interior lights

6. Rear interior/reading lamps: Illuminate when the doors are unlocked and extinguish 60 seconds after all doors are closed, when the engine starts or when the vehicle is locked. Press the switch to switch on and off manually. Touch the front courtesy lamp lens for approximately 2 seconds to deactivate/activate automatic illumination of the rear interior lamps.
7. Luggage compartment lamp: Illuminates when the tailgate is opened.

## INTERIOR LIGHTS INTENSITY

While the exterior lamps are turned on, the intensity of the interior switch illumination can be adjusted. See **306, DRIVER CONTROLS**.

## AMBIENT LIGHTING

On some vehicles the LED ambient lighting can be configured for colour and intensity through the Touch screen. Although the exterior lamps must be turned on while changes are being made, a 1 second preview of any changes made can be seen if the exterior lamps are turned off. See **75, EXTRA FEATURES**.

**Note:** Vehicles without configurable ambient lighting will illuminate the standard white light for the interior lamps.

## STEALTH MODE

Stealth mode lowers the level of interior illumination to aid night time driving. Stealth mode can be enabled through the Touch screen **Extra features** menu. See **75, EXTRA FEATURES**.

Once enabled, Stealth mode is activated by switching the Touch screen off using the on/off button. See **72, TOUCH SCREEN HOME MENU**. If night time conditions exist when the Touch screen is turned off, interior switch illumination, and instrument panel back-lighting will automatically reduce to their minimum light levels. Stealth mode will be deactivated if night time conditions no longer exist, or if the Touch screen is turned back on.

**Note:** The interior illumination control will not operate while Stealth mode is active. See **306, DRIVER CONTROLS**.