

LABEL LOCATIONS




Warning labels attached to the vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is turned on.

Additional information labels may also be found at the following locations:

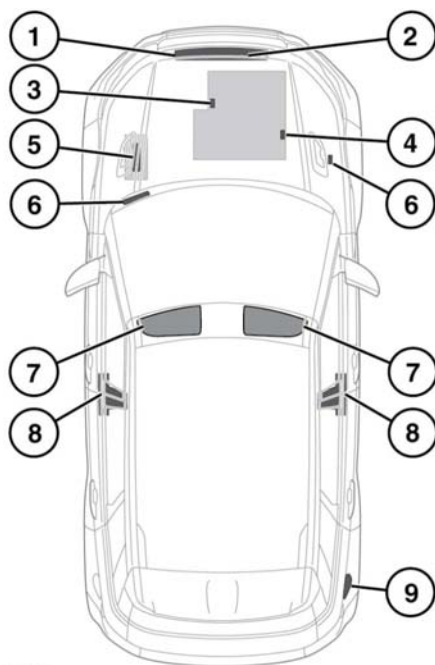

E164381

1. Air conditioning label: Located on the bonnet locking platform.
 2. Vehicle Identification Number (VIN): Located on the bonnet locking platform.
 3. Engine identification information: Stamped into the engine mounting flange.
 4. Engine information label: Located on the top right side of the engine cover.
 5. Battery warning symbols: Located on the top of the battery.
 6. The VIN is stamped on a plate, which is visible through the lowest part of the left side of the front windscreen. The VIN is also stamped into the right side, front inner wing. The VIN can also be shown in the Message centre via the **Vehicle Info** and **VIN Display** Information panel menus. See **42, INSTRUMENT PANEL MENU**.
***Note:** If you need to communicate with a Dealer/Authorised Repairer, you may be asked to quote the VIN number.*
 7. Airbag label and vehicle handling label: Located on the Sun visors.
 8. Tyre pressure label, airbag warning label and Certification label: Located at the base of the left side B pillar (right side, China only). The Certification label shows VIN, tyre and build date information.
 9. Fuel specification label: Located inside the fuel filler flap.
- It is important that you are familiar with these subjects to make sure that the vehicle and its features are used safely.