


## STANDARD PORTABLE MEDIA CONTROLS

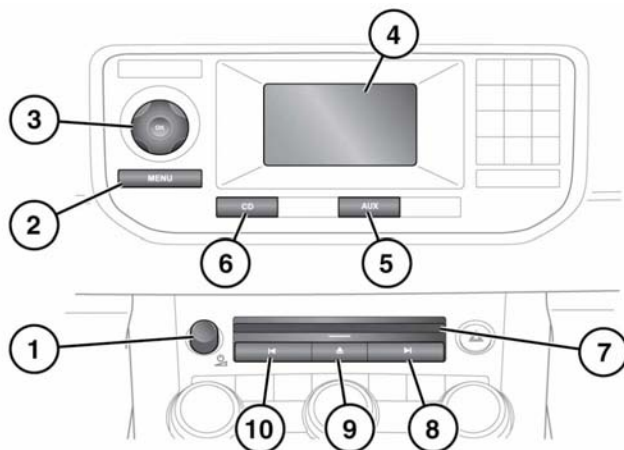

E150343

1. Press to switch on/off. Rotate to adjust volume level.
2. **MENU** button: Audio settings.
3. **OK** and navigation menu control: Use the navigation control to move to any cursor/highlight. When the required option is highlighted, press the **Ok** button to select.
4. Audio Information display.
5. **AUX** input select: Use when a portable device is connected.
6. **CD** menu.
7. CD loading slot.
8. Seek up:
  - Short press to select the next track on chosen audio source.
  - Long press to scan forwards through a CD track or MP3 folder.
9. CD eject button.
10. Seek down:
  - Short press to select the previous track on chosen audio source.

- Long press to scan backwards through a CD track or MP3 folder.

## LOADING A COMPACT DISC



Do not use discs with paper labels, dual discs or DVDPlus discs. The front loading CD player may load and play this type of disc, however it is likely that the disc will not eject and will block the CD mechanism. Such damage to a CD player will not be covered under warranty.



Do not force the disc into the CD loading slot.

**Note:** Copy-protected CDs may fail to play in your CD player or may be played subject to various limitations (e.g. sound quality may be impaired). If you experience a problem, try the CD in other players before contacting the CD vendor.

The unit will play compact discs that conform to the international Red Book standard audio specification.