

**Note:** In some markets a second press of the button will turn on the headlamps and reversing lamps. A third press will be required to turn the lamps off.

6. Emergency key access: Slide open the side cover to release, then remove.
7. Remove the emergency key blade and unfold.
8. If the Smart key fails to open the vehicle, insert the key blade into the slot at the base of the driver's door lock cover. The door lock cover is marked with a key symbol. To release the cover, gently lever the key blade upwards. Carefully twist the key blade, to lever the cover off the retaining clips. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound. To disarm the alarm, see **92, KEYLESS START BACKUP**.

**Note:** When replacing the door lock cover, locate the top retaining clips before pushing the cover into position.

**Note:** When the driver's door is unlocked using the key blade, the alarm will sound until the Smart key is positioned correctly.

**Note:** A replacement Smart key can only be obtained from your Dealer/Authorised Repairer. The Dealer/Authorised Repairer will require proof of identification and ownership.

Notify your Dealer/Authorised Repairer immediately if a Smart key is lost or stolen.

9. Keyless entry/exit:
  - Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

## SINGLE/MULTI-POINT ENTRY

When you press the unlock button, the vehicle will unlock in 1 of 2 ways:

1. Single-point entry: Unlocks the driver's door and fuel filler flap only. A second press is required to unlock the remaining doors and the tailgate.
2. Multi-point entry: Unlocks all of the doors, the fuel filler flap and the tailgate on the first press.

To change from Single to Multi-point entry (or vice versa), press both the lock and unlock buttons simultaneously for 3 seconds. The hazard warning lamps will flash twice to confirm the change.

This feature may also be set via the settings menu. See **42, INSTRUMENT PANEL MENU**.

**Note:** If, when the vehicle is unlocked, an audible warning is emitted, this will be a mislock error. There may be a fault with either of the alarm sensors. Consult a Dealer/Authorised Repairer as soon as possible.

## GLOBAL OPENING

Press and hold the Smart key unlock button for 3 seconds to unlock the vehicle and open all the windows.

Press any button on the Smart key to cancel the operation.

**Note:** Global opening can be enabled and disabled via the **Vehicle Set-up** Instrument panel menu. See **42, INSTRUMENT PANEL MENU**.

## KEYLESS ENTRY

Keyless entry allows the vehicle to be opened if a Smart key is within 1.0 m (3 ft) of the door handle or the tailgate external switch.