

Note: If a trailer is connected to a Land Rover approved trailer socket, the rear sensors will be disabled.

To enable the Parking aid system, press the Parking aid button (1) while the vehicle is moving forwards. The button indicator will illuminate to confirm.

To disable the Parking aid system, press the Parking aid button again. The button indicator will extinguish to confirm.

The Parking aid system will remain off until Reverse (R) gear is selected, or the system is manually enabled again while the vehicle is moving forwards.

The Parking aid system is automatically activated when R is selected.

The Parking aid system assists the driver while maneuvering the vehicle in confined spaces. When active, camera images can be displayed in the Touch screen, dependent on the vehicle's specification, see 115, **SURROUND CAMERA SYSTEM**, or see 106, **REAR CAMERA**.

Note: If the system does not detect an object likely to come into close proximity with the vehicle, it will not display any tracking information in the Touch screen.

When in R, both the front and rear sensors are active; when in Drive (D) only the front sensors are active.

When objects are detected, the Parking aid system will emit a warning tone, which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the obstacle is within 12 inches (300 mm).

Note: The warning tone will stop when the distance between the vehicle and the object remains constant.

The Parking aid system operates at speeds of up to 10 mph (16 km/h).

Note: The sensors should be kept clean to maintain accuracy and performance. See 198, **SENSORS AND CAMERAS**.

PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound and the switch indicator will flash. A graphic and the message **Parking Aid is not available. Please consult your dealer** will be displayed on the Touch screen. Contact a Retailer/Authorized Repairer as soon as possible.

REAR CAMERA

WARNING

Always turn and look before reversing. It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.


NOTICE

Some overhanging objects or barriers, which could cause damage to the vehicle, may not be detected by the camera.

NOTICE

The camera must be kept clean and free from debris or obstructions, for example, ice, frost, snow, leaves, mud or insects. Failure to keep the camera clean may result in miscalculation or false indications.


If the vehicle is fitted with a Rear camera, this has priority over the Parking aids display.

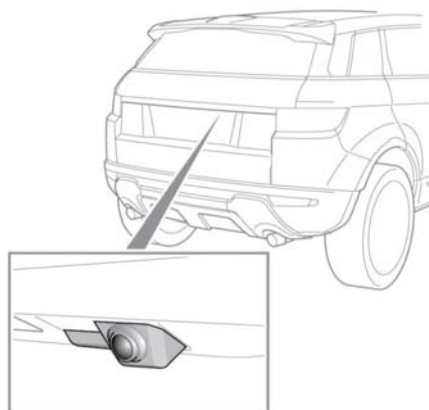

E153429

The Rear camera is located on the tailgate.

When Reverse (R) gear is selected, the screen automatically displays a wide-angle, color image from the rear of your vehicle. Overlaid on the image are reversing guide lines and an indication of which sensors are active.

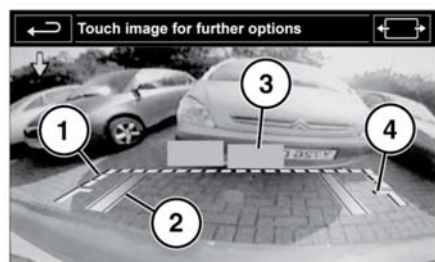

E161393

1. Dotted guidance line: The safe working width of the vehicle (including the exterior mirrors).
2. Solid guidance line: The projected path based on the current steering wheel position.


3. Park Distance Control (PDC) graphics: A colored area appears, to indicate which rear sensor(s) has been activated.
4. Tailgate access guidance line: Do not reverse beyond this point, if tailgate access is required.

To cancel the Rear camera display at any time, push the **Home menu** button or touch the back soft key.

Note: A camera icon will be displayed on the user options screen, when selected from **Extra features**. Touch the camera icon, to return to the Rear camera screen.

For vehicles fitted with a Rear camera only:

To adjust the camera settings while in Reverse (R), touch anywhere on the Touch screen to display the settings.

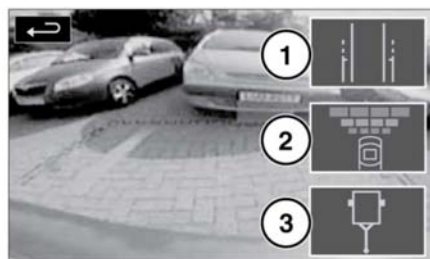


E161395

1. Touch to enable/disable the Park assist guidance lines.
2. Touch to enable/disable the Park Distance Control (PDC) graphics.
3. Touch to enable/disable the Hitch guidance line. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **90, HITCH GUIDANCE**.

For vehicles fitted with a Surround camera system:

Parking aids

To adjust the camera settings while in Reverse (R), touch anywhere on the Touch screen to display the settings, or select **Extra features** from the Home menu, touch **Cameras** and select **Settings**.

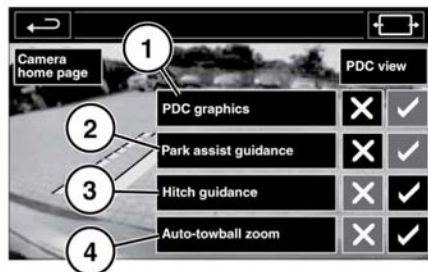

E161394

1. Touch to enable/disable the Park Distance Control (**PDC**) **graphics**.
2. Touch to enable/disable the **Park assist guidance lines**.
3. Touch to enable/disable the **Hitch guidance** line. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **90, HITCH GUIDANCE**.
4. Touch to enable/disable the **Auto-towball zoom**. As the vehicle closes to within 24 ins (600 mm) of a towing hitch, an automated zoom is operated.

The Rear camera display on the Touch screen will discontinue when either of the following apply:

- A forward gear is selected for longer than 5 seconds.
- A forward gear is selected and/or the vehicle's speed is greater than 11 mph (18 km/h).